



Index	Description	Reference
1	OIL PUMP COVER GASKET	064-47205
1	OIL PUMP GASKET, E, F DESIGN	064-47194-000
2	BEARING HOUSING GASKET	064-21703
3	MAIN BUSHING INSERT	029-11097-00
3	MAIN BUSHING INSERT (FINISHED BORE, 0.010" UNDERSIZE)	
3	MAIN BUSHING INSERT (FINISHED BORE, 0.020" UNDERSIZE)	
4	CONNECTING ROD, 3 " STROKE	364-47256
4	CONNECTING ROD 0.010" UNDERSIZE, 3" STROKE	
4	CONNECTING ROD 0.020" UNDERSIZE, 3" STROKE	
4	CONNECTING ROD, 4 " STROKE	364-47257
4	CONNECTING ROD 0.010" UNDERSIZE, 4" STROKE	
4	CONNECTING ROD 0.020" UNDERSIZE, 4" STROKE	
5	PISTON - ALUMINUM	064-46538
5	PISTON - CAST IRON	064-21653
6	COMPRESSION RING	029-15175
7	PISTON RING KIT, (2) COMPRESSION RINGS	029-15175
8	SOLENOID GASKET, E, F DESIGN	064-47327-000
9	MOTOR HOUSING TO COMPRESSOR BODY GASKET	064-21699
10	END COVER GASKET	064-21706
10	MOTOR COVER GASKET, E, F DESIGN	028-13108-000
11	TERMINAL BOLT GASKET	064-36151
12	TERMINAL PLATE GASKET	064-21839
13	DISCHARGE VALVE TO DISCHARGE MANIFOLD GASKET, 8 CYL. A,B,C,E,F DESIGN	064-47204
14	SUCTION VALVE TO SUCTION STRAINER GASKET, 4 & 6 CYL.	064-22018
14	SUCTION VALVE TO SUCTION STRAINER GASKET, 8 CYL. A,B,C,D DESIGN	064-22017
15	SUCTION STRAINER COVER GASKET	064-30111
16	CYLINDER LINER	664-21667
17	VALVE PLATE SHIM, ALUMINUM	064-21704
18	SUCTION VALVE RING	064-43011
19	SUCTION VALVE SPRING	229-13813-800
19	SUCTION VALVE PLATE SPRING, HOURGLASS SHAPE	229-22400-800
20	SUCTION VALVE PLATE (BARE)	064-42716
20	SUCTION VALVE PLATE,MID-LIFT FOR R134A	064-48825-000
20	SUCTION VALVE PLATE, HIGH LIFT FOR R-22	664-48896-000
21	SUCTION VALVE PLATE ASSEMBLY	664-42718
22	DISCHARGE VALVE ASSEMBLY, NEW STYLE	664-48785
23	3/8-24 FLEX LOC NUT-FULL-LITE	
24	DISCHARGE VALVE CAGE	
25	DISCHARGE SPRING (Straight) OLD STYLE	229-13248-800

25	DISCHARGE SPRING (NEW STYLE) ENLARGED ENDS	029-21788
26	DISCHARGE VALVE RING	064-43012
27	DISCHARGE VALVE SET	
28	HEAD & HANDHOLE COVER GASKET	064-21700
29	DISCHARGE MANIFOLD GASKET	064-21838
30	DISCHARGE VALVE TO DISCHARGE MANIFOLD GASKET, 4 & 6 CYL. D DESIGN	064-47078
30	DISCHARGE VALVE TO DISCHARGE MANIFOLD GASKET, 8 CYL. D DESIGN	064-47079
31	DISCHARGE VALVE TO DISCHARGE MANIFOLD GASKET, 4 & 6 CYL. A,B,C DESIGN	028-00864
32	THRUST BUSHING	029-11098-000